

NVMS-1200

User Manual

Contents

1	Software Introduction	1
1.1	Summary	1
1.2	Install and Uninstall	1
1.2.1	Install the Software	1
2	Login Software	3
2.1	Login	3
2.2	Control Panel Instruction	3
3	Device Management	5
3.1	Add Device	5
3.2	View, Change or Delete Device	6
3.3	Area and Camera Management	8
3.3.1	Area Management	8
3.3.2	Camera Management	9
4	Group and Scheme Setting	14
4.1	Create, Change or Delete the Camera Group	14
4.2	Add or Remove the Camera Group	15
4.3	Create, Change or Delete Group Dwell Scheme	15
4.3.1	Create Scheme	15
4.3.2	Change and Delete Group Dwell Scheme	15
5	Live Preview	16
5.1	Preview	17
5.1.1	Monitory Point Preview	17
5.1.2	Stop Preview	17
5.2	Dwell Preview	17
5.2.1	Group Dwell Preview	17
5.2.2	Scheme Dwell Preview	18
5.3	Preview Control	19
5.4	Snap	19
5.4.1	Snap	19
5.4.2	Snap Number	20
5.4.3	Snap Path	20
5.5	Multi-screen to Preview	20
5.6	Talk and Broadcast	21
5.6.1	Talk	21
5.6.2	Broadcast	21
5.7	PTZ Control	21
5.7.1	Parameter Configuration of PTZ	21
5.7.2	PTZ control	21
6	Playback Management	23
6.1	Snap When Playback	24
6.2	Download Record	24
6.3	View the Progress of Downloading	25
7	Alarm Management	26
7.1	Sensor Alarm	26
7.2	Motion Detection Alarm	27
7.3	Video Loss Alarm	27
7.4	Alarm Preview	27
7.4.1	Alarm Preview Configuration	27
7.4.2	Alarm Preview	28
8	Local Log	29
8.1	Search log	29
8.2	Log Maintenance	29
8.3	Export	29
9	User Management	30
9.1	Create a Resource with the Default Permission	30
9.2	Create, Change and Delete Users	30
9.3	Account Right Configuration	31

10	Basic	33
10.1	Location and Path	33
10.2	Backup and Restore	33
10.2.1	Backup System Configuration data	33
10.2.2	Restore System Configuration Data.....	33
10.3	Manually Trigger the Alarm Output	34

1 Software Introduction

In this chapter, you will read a detailed introduction of the operation environment and install of this software.

1.1 Summary

 
Network Video Monitoring System (hereinafter referred to as “NVMS-1200”) is a monitoring client which is specially designed for network video surveillance through the computer with MAC OS. After the network video monitoring system is well built, the super administrator can control the video input signal devices, such as cameras, domes, etc., to achieve live monitor, video record and backup by configuring the video parameters and viewing the live in the control panel. Users can choose the menu to control video surveillance system in the control panel. The main functions of the control panel include live view, playback, device management, group and scheme settings, user account and permission, local log, basic configuration and alarm management.

1.2 Install and Uninstall


1.2.1 Install the Software

Before installation, please make sure that the OS version of your PC is V10.7.5 or above.

Double click “NVMS1200.pkg” file to enter the Installation Wizard. Click **【Continue】** to install.

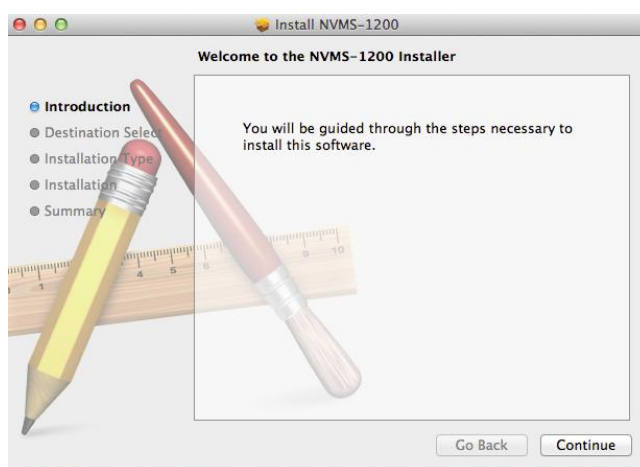


 Choose the path you want to install the software by clicking “Change installation location”

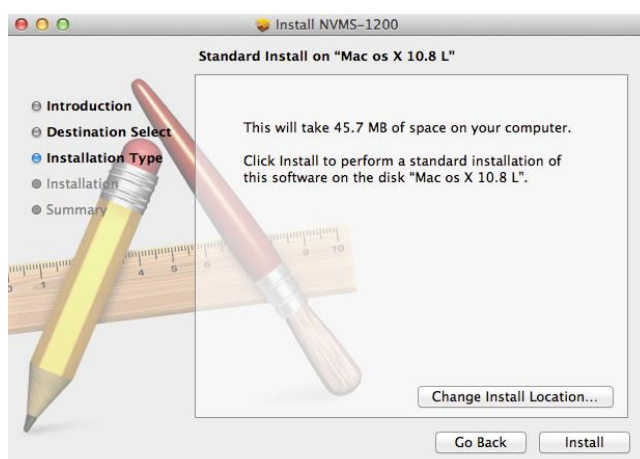

NVMS-1200 User Manual

 
Select the disk you want to install the software and click **【Continue】** .

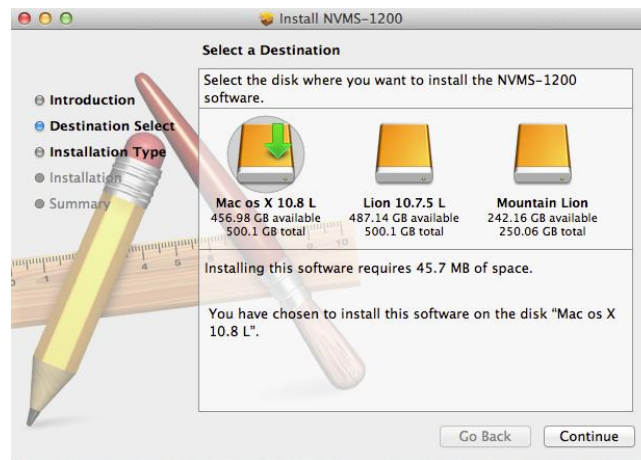

Input the name and password of the computer and then click **【Install Software】** button to install.



 After the software is successfully installed, click **【Close】** to end.

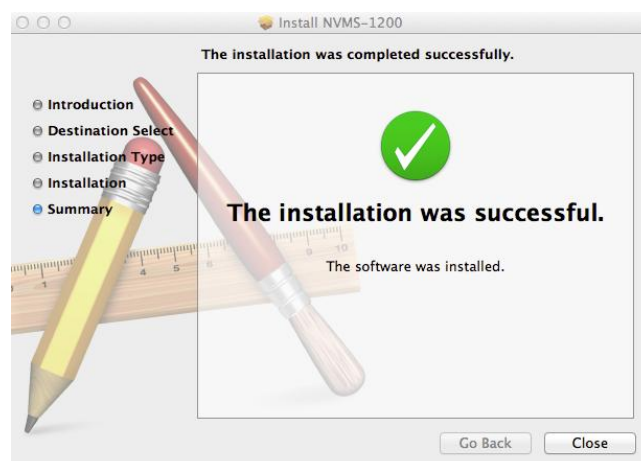

2 Login Software

2.1 Login

First time to login:

- ① For the first time to run the NVMS-1200, you need to register a super administrator. You shall self-define the username and password.
- ② To avoid forgetting the password, you can set some questions to help you find the password quickly.
- ③ After you input your user name, password and set the questions and answers, click **【Register】** to enter into the software.

Register Super User

User Name

Password

Confirm Password

To avoid forgetting, please fill out the real information, which will help you get the password quickly by answering those questions.

Question one

Answer

Question two

Answer

Input the username and password you have created and then click **【Login】** to enter the control panel of the software.

Login

User Name

Password

2.2 Control Panel Instruction

The control panel of NVMS-1200 is shown below.

Control Panel | Live Preview | Synchronized | Alarm Preview | Local Log

1

- Live Preview**: Live Preview | Alarm Preview | Change Alarm Preview Settings
- Playback**: Synchronized Playback of Device | Backup Record
- Device**: Create Device | Change or Delete Device | View or Change Device Settings | Change Camera Settings | Create Area | Area And Camera Management | Change or Delete Schedule
- Group and Scheme Settings**: Create Camera Group | Change or Delete Group | Add Scheme | Change or Delete Scheme
- User Management**: Create Account | Change or Delete User Account | Set Account Permission | Change Account Password
- Local Log**: View and Export Local Log | Log Maintenance
- Basic**: Backup System Config | Restore System Configuration Data | Set Snap Default Number | Manually Trigger the Alarm Output
- Alarm Management**: Add or Remove Area Sensor | Change Sensor Settings

4

Alarm Time	Alarm Source	Status
2013/8/15 14:41:18	New Device1_CAME3RA01Motion Detection	Alarm
2013/8/15 14:41:18	New Device1_Sensor 1	Alarm
2013/8/15 14:41:20	New Device1_CAME3RA01Video Loss	Alarm

5 User Name: 1 CPU: 20% RAM: 55% 2013/8/15 14:41:29

NVMS-1200 User Manual






 


There are five areas in the main interface of this software. The descriptions of each area are as follows.

Area	Description	Area	Description
1	Function Area	2	Tab Bar—to display the operated functions
3	Menu Bar	4	Alarm Information List.
5	Status information list		


Description of Menu Bar


Menu	Description
Start	Export the control panel, live preview, playback tab and lock or exit the client.
View	Export the live preview, control panel, local log, alarm preview, playback, user account and permission, basic configuration and device management and organize the live view
System	Including lock client , broadcast to device, switch user, import or export configuration, etc.
Help	View user manual and software version

Descriptions of Function Module

Menu	Description
	Live Preview: To view live images and record, snap, control PTZ, etc.
	Playback: To remotely play the local record.
	Device Management: To create, modify or delete areas, devices and cameras.
	Group and Scheme Settings: To create, modify or delete camera groups and schemes.
	User Account and Permission: To add, modify, delete user and user permission.
	Local Log: To search, view and backup local log.
	Basic Configuration: To setup record partition and path, system startup and maintenance & backup and restoration.
	Alarm Management: To add or remove the sensor of the area; To setup alarm trigger and modify the area of the sensor.

3 Device Management

 In the control panel, click  icon to enter the device management interface.

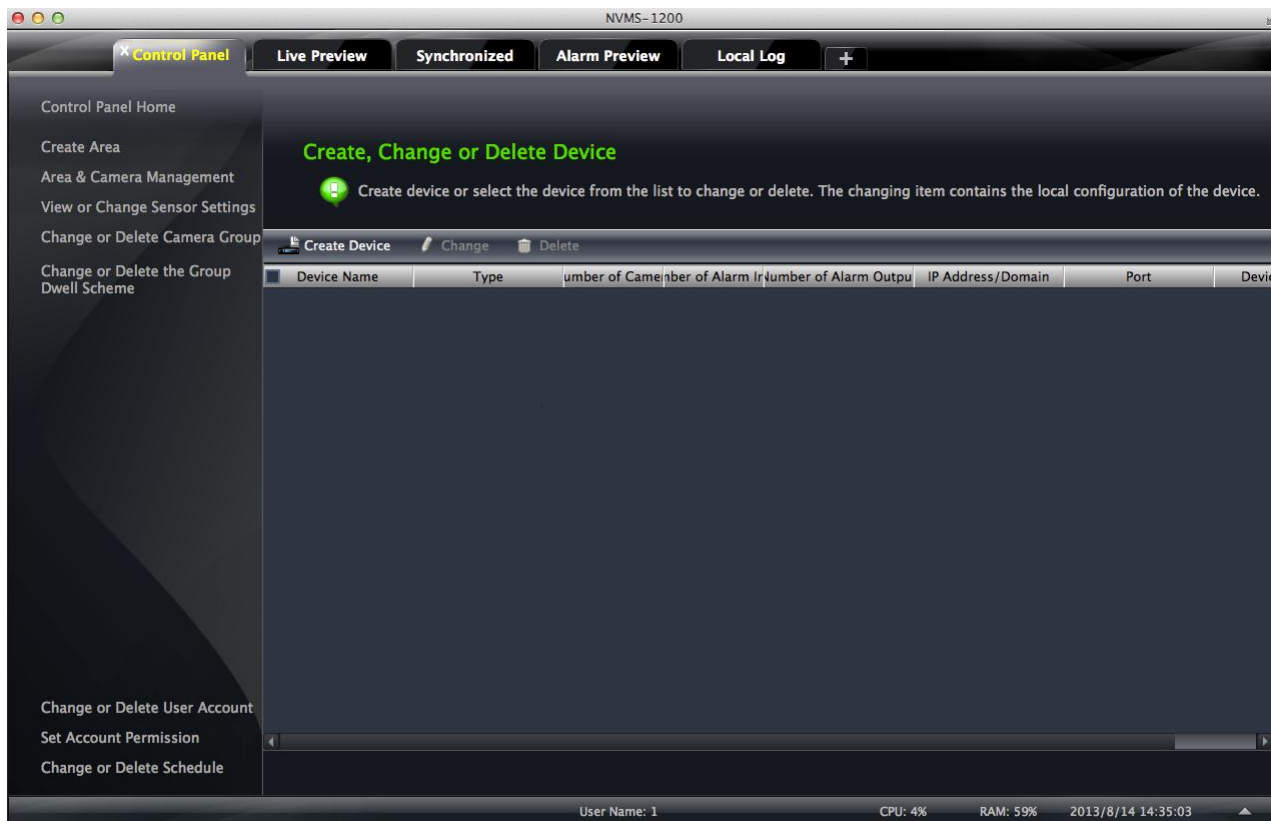

3.1 Add Device

Click  button to enter the interface.

- ① Select device type and input device name;
- ② Input IP address or domain or serial number, port of the device and then enter its user name and password.
- ③ Create an area. If you haven't created area, you can click "Create a New Area" to create.
- ④ Check "Upload bandwidth more than 2M" according to the actual network situation. Checking or not checking it will affect the stream choice of live preview.

Note: You can click "Create an Area" shortcut menu under Device to create an area in the control panel.

The screenshot shows the 'Add Device' configuration form. It includes the following fields and options:

- Device Type: IP Camera (dropdown menu)
- Auto Report(Port 2009):
- Device Name: (*Limited to 1-60 characters)
- IP Address:
- Port: (*Limited to 10-65535)
- User Name: (*Limited to 1-60 characters)
- Password: (Limited to 32 characters)
- Select Area: root (dropdown menu)
- Upload bandwidth more than 2M

Buttons at the bottom: Search Device, Cancel, OK.


You can also check "Auto report" to add device. The setting steps are as follows:

- Choose the device type and check "Auto".
- Input device name.

 
NVMS-1200 User Manual

- If you want to add DVR, please enter Network→Sever tab from device. Check “Enable”, input IP address and port (2009) of NVMS-1200 & device ID.
- If you want to add IP camera, please enter Network Configuration → Server Configuration. Check “Do you want IP camera to connect server” and input NVMS-1200 Address, Port and Device ID.
- Input the Device ID according to the device ID of DVR or IP camera device.


➤ Add Online Devices


Click  button to automatically search online devices in the local network. Click a device to display its basic information. Double click it to add it.

If the device is added, this device will be hidden in the search device interface.

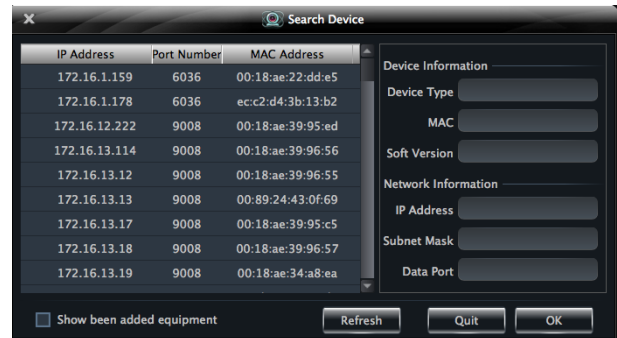

 3.2 View, Change or Delete Device

 Select the added device and click  button to delete the device from the list.

Select the added device and click  to pop up a window. In this interface, you can change the device name, address, port, etc, or change basic configuration, time configuration, DDNS configuration and Email configuration, etc.

➤ Change the Device Name

Click “*Change Device Name*” to change the name of the selected device.

➤ Change Device Address

Click “*Change Device Address*” to change the IP address of the selected device.

➤ Change Device Port Number

Click “*Change the Port Number of Device*” to change the port of the selected device.

➤ Change Device User Name

 
Click “*Change Device User Name*” to change the device account name.

➤ Change Device Password

Click “*Change Device Password*” to change device password.

➤ Change Connection Bandwidth

Check “*Upload bandwidth more than 2M*” according to the actual situation.

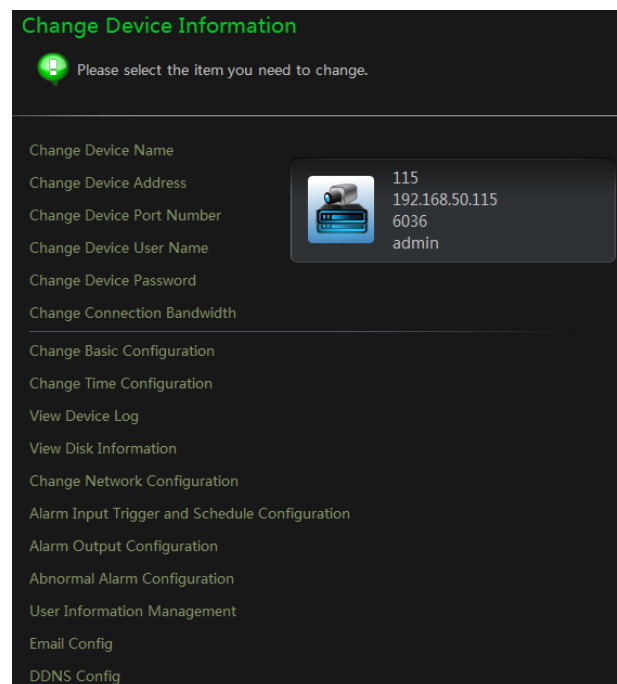

NVMS-1200 User Manual

Note: Checking or not checking it will affect the stream choice of live preview.

➤ Change Basic Configuration

Click **“Change Basic Configuration”** to pop up a dialog box. You can change the basic configuration of device and check “Permission Check” or “Record Coverage” according to the actual situation.

➤ Change Time Configuration

Click **“Change Time Configuration”** to enter the interface. Change the time and date if you need.

Check “Sync by NTP Server” to synchronize with NTP server.

➤ View Device Log

Click **“View Device Log”** to enter the interface.

Choose the type of system logs; enter start time and enter time to search the log information of the device.

➤ View Disk Information

Click **“View Disk Information”** to check the detail information of disk from the list.

➤ Change Network Configuration

Click **“Change Network Configuration”** to enter the interface. You can change HTTP port, Server port; network address, etc.

Note: If changing the port and IP address there, the network will disconnect. Then you need to accordingly change the port and IP address of the device connecting the NVMS-1200.

➤ Alarm Input Trigger and Schedule Configuration

Click **“Alarm Input Trigger and Schedule Configuration”** to enter the interface. Select a sensor corresponding to the alarm input; choose a type and holding time for it. You also can set trigger alarm or other configurations. Please refer to the picture on the right.

➤ Device Alarm Output Configuration

Click **“Alarm Output Configuration”** to enter the interface. Select an alarm output and holding time; then edit a name for it. You can enable buzzer alarm and set a time for it.

➤ Abnormal Alarm Configuration

Click **“Abnormal Alarm Configuration”** in to enter the interface. Choose the alarm type according to your need. Enable “Buzzer Alarm” and select alarm out.

➤ User Information Management

Click **“User Information Management”** shortcut to enter the interface. You can check the information of user who is logging in the device.

Alarm In: SE1

Enable Alarm In

Schedule Scheme: Set Schedule

Type: Normally Open

Holding Time(s): 10

Alarm Trigger Configuration of Device

Trigger Alarm: Select Alarm Out

Trigger Record: Select Record Camera

Big Screen Alarm: Null

Buzzer Alarm

Trigger Email

Trigger PTZ

Channel: Channel1

Type: No Trigger

Number:

Cancel OK

NVMS-1200 User Manual

➤ Email Configuration

 
Click “Email Configuration” to enter the interface. You can configure the basic parameters of Email.

➤ DDNS Configuration

Click “DDNS Configuration” to enter. You can configure the basic parameters of DDNS.

3.3 Area and Camera Management

In the control panel, click “**Change Camera Settings**” under Device to enter the interface. You can modify or delete the area and manage the cameras. Select a camera you want to setup as shown in the below figure.

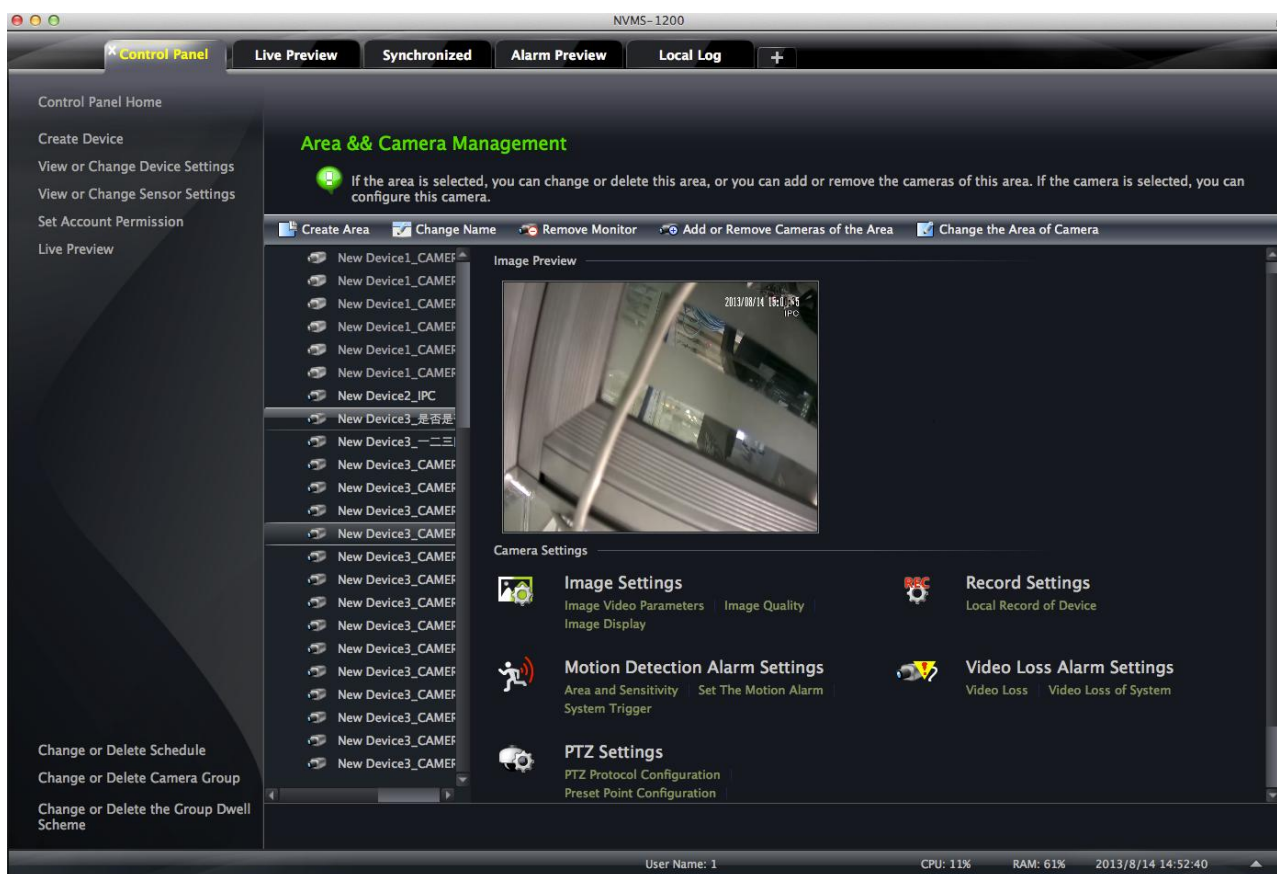

Different devices have different functions. Not all devices have the above-mentioned camera settings. Please set up the camera parameters according to the features of your devices.

3.3.1 Area Management

 

Click  button to create area.


Select an area and click  button to change its name.


Select an area and click  button to delete it.

Select an area and click  to pop up a window.

NVMS-1200 User Manual

 - ① Check the camera on the left column and click  button to add the camera to the area.
- ② Check the camera on the right column and click  button to remove the camera from the area.

 Select a camera and click  button to modify the area of this camera.

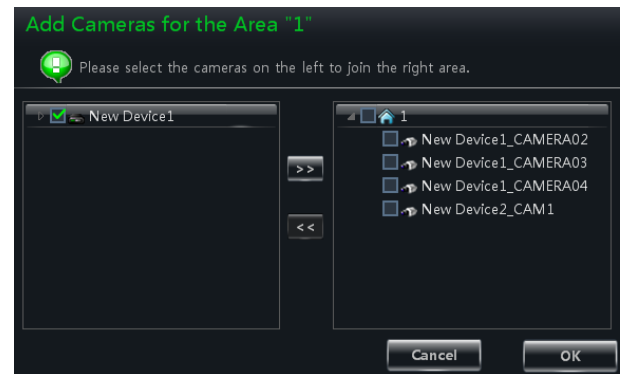

3.3.2 Camera Management


The real-time image will be displayed after selecting a camera. You can setup the parameters of this camera.

➤ Image Settings

Image settings include image video parameter, image quality and image display.


Click **“Image video parameters”** to enter the interface.

 - ① Adjust the brightness, contrast, saturation and chroma of the image.
- ② Clicking **【Restore Default】** button will restore the above parameters to factory default settings.

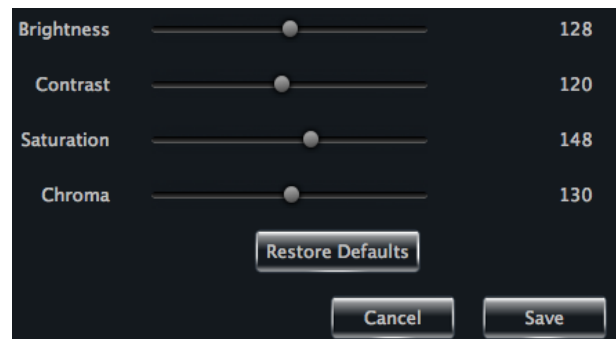


Click **“Image Quality”** under Image Settings to enter the interface.

 Choose the device stream, resolution, quality, etc. according to practical situation.

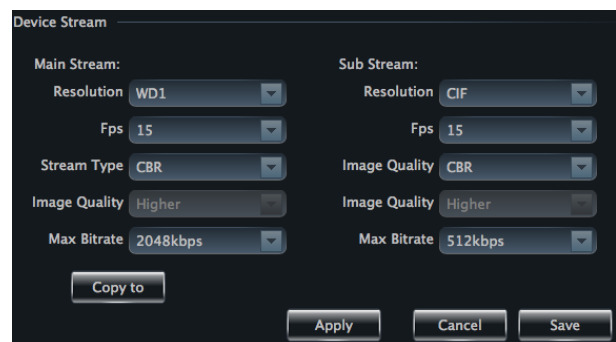

Click **“Image Display”** to enter the interface.

 - ① Create the camera's name and set up its display position on the OSD including the time stamp.
- ② Click **【Copy to】** button to apply the settings to the selected channel.

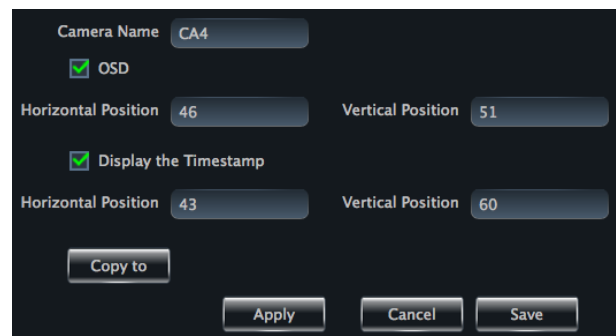


NVMS-1200 User Manual

➤ Record Settings


Click **“Record Settings”** to enter the interface as shown on the right.



 Under the record of device

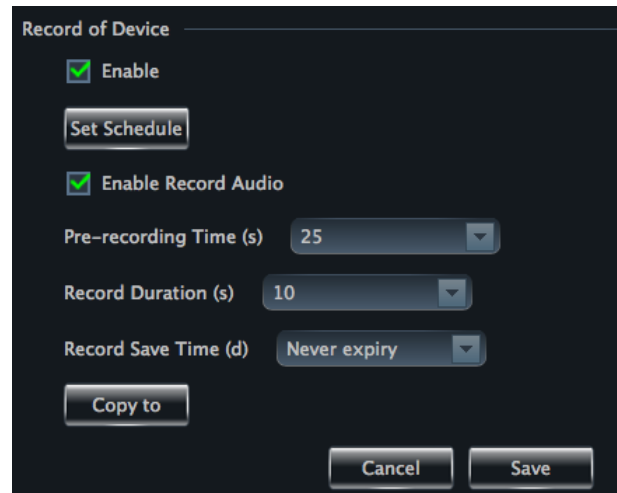 - ① Enable schedule Record.
- ② Set schedule.
- ③ Choose pre-recording time, duration and record save time.
- ④ Click **【Copy to】** button to save the settings to the selected channel.

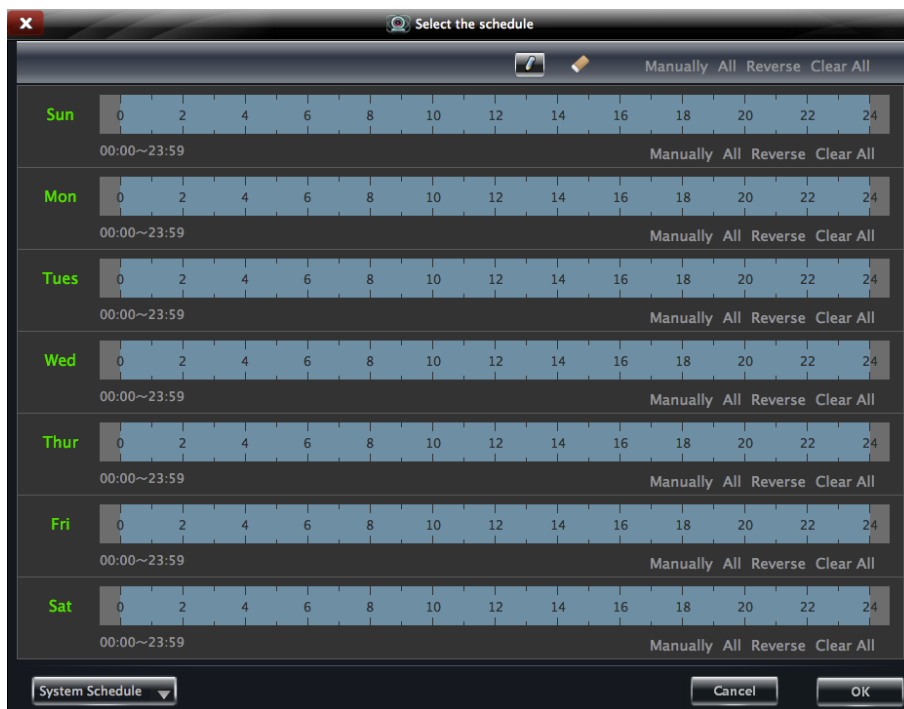

The picture of setting schedule record of system:

 


- Click  icon and move the cursor to select the time.
- Click  icon to delete the selected time.
- Clicking “Manually” to manually input time
- Click “All” / “reverse” to quickly select the time.
- Click “Empty” to clear all the time.

➤ Motion Detection Alarm Settings

Click **“Area and Sensitivity”** under Motion Detection Alarm Setting to enter the interface.

- ① Drag slide bar to set the sensitivity value. The higher the value is, the more sensitive it is.
- ② Click “Erase”/ “Add”, then hold press “Ctrl” and left click mouse to delete /add the area you want.

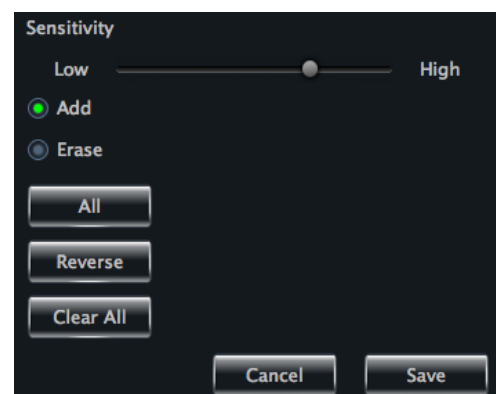

NVMS-1200 User Manual

- ③ Click **【All】** / **【Reverse】** / **【Clear All】** button to select area or clear all the area quickly.

Click **“Set Motion Alarm”** under Motion Detection Alarm Setting to enter the interface.

Note: Please refer to the user manual of the device for device linkage configuration.

Click **“System Trigger”** under Motion Detection Alarm Setting to enter the interface.

Under the system linkage, check **“Trigger to Play Audio File”**. If the motion alarm of a certain channel is triggered, there will be given out a sound like **“beep”**.

Click **【Trigger the Big Screen】** button to select channel. If the motion alarm of the selected channel is triggered, a big picture will pop up on the screen.

➤ Video Loss Alarm Settings

Click **“Video Loss”** to enter the interface. The steps of configuring video loss are same with the device settings; please refer to the video loss chapter of device user manual.

 
➤ Video Loss of System

Click **“Video Loss of System”** to set. You can check **“Trigger to Play Audio File”**. If the video loss alarm of a certain channel is triggered, there will be given out a sound like **“beep”**.

Click **【Trigger the Big Screen】** button to select channel. If the video loss alarm of the selected channel is triggered, a big picture will pop up on the screen.

➤ **PTZ Settings**

Click **“PTZ Protocol Configuration”** under PTZ Settings to enter the interface. You can enable or disable PTZ. From the Protocol and Baud Rate drop-down menu, choose a protocol and a baud rate to associate with the PTZ, and then input the address of the PTZ connecting the software.

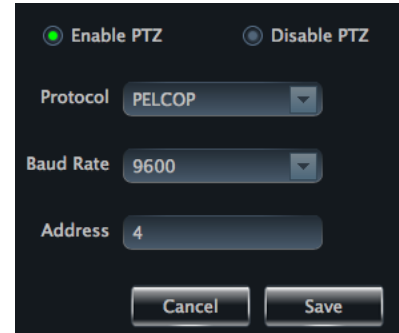


Click **“Preset Point Configuration”** under PTZ Settings to enter the interface. Enable corresponding preset points and create a new name in the “New Name” field by selecting the preset point. Adjust the dome direction, speed, etc by clicking the buttons. Click **【Save Position】** to save the current position of the dome.



The definitions of the buttons are below.

Buttons	Description
	means the dome rotate up; means the dome rotate up left; means the dome rotate up right; means the dome rotate down. means the dome rotate left down; means the dome rotate right down; means the dome rotate left; means the dome rotate right; means the dome stop rotating
	Drag the slider bar to adjust rotation speed of the dome
	Focus button. Click button to obtain long focus. Click button to obtain short focus
	Iris button. Click button to increase light of the dome. Click button to decrease light of the dome
	Zoom button. Click button to zoom in the picture of this camera. click button to zoom out the picture of this camera

 Return to Area and Camera Management interface, and then click **“Cruise Line Configuration”** PTZ Settings. You can add/change/preview/delete curies.

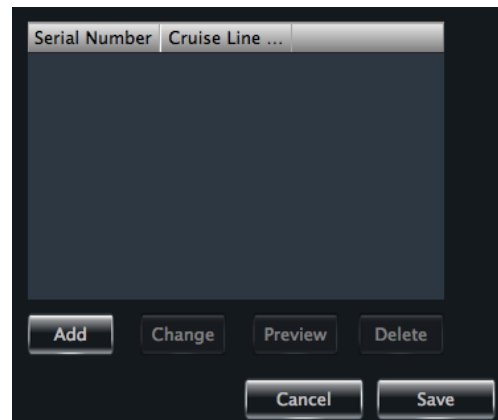


NVMS-1200 User Manual

In the Area and Camera Management interface, click “PTZ Track Settings” to see the picture on the right hand. You can set the PTZ track.




 ➤ Remove camera

In the Area and Camera Management interface, select a camera, click  button to pop up a dialog window, click **【OK】** button to remove the camera.

4 Group and Scheme Setting

 In the interface of control panel, click “Group and Scheme Setting” to enter the interface. Please refer to the below picture.

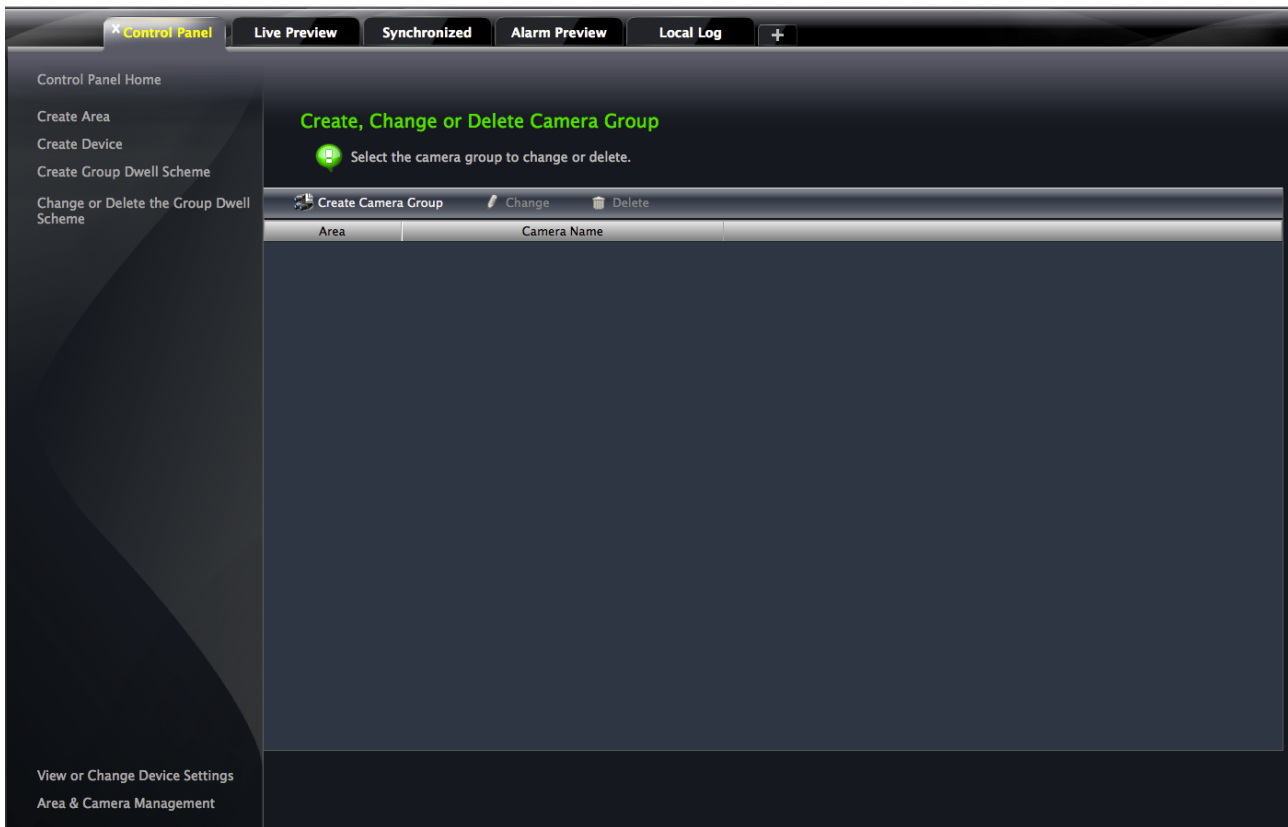


4.1 Create, Change or Delete the Camera Group

In the above interface, click



 button to create a group.

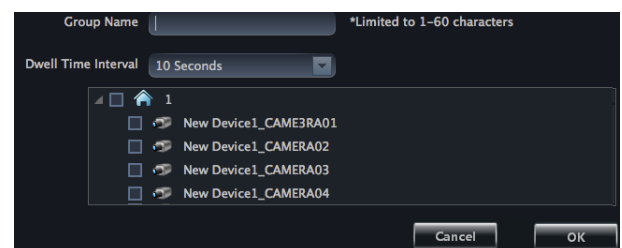

Select a group in the group list, click

 


button to delete it.


 

Select a group and click



button to enter the interface as shown on the right. You can change the group name and dwell time interval in this interface.

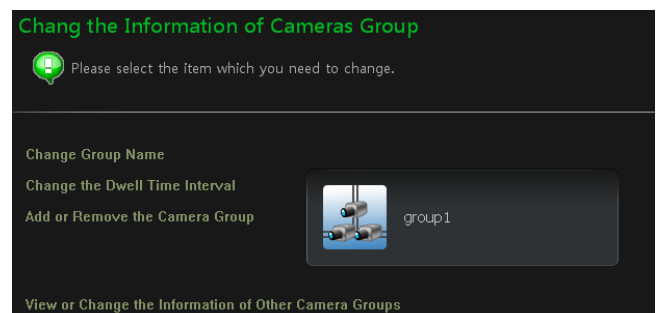

 
4.2 Add or Remove the Camera Group

- ① Select a group and click  button to enter the interface. Then click **“Add or Remove the Camera Group”** to pop up the window as shown on the right.
- ② Check cameras on the left and click  button to add the selected cameras to the group on the right.
- ③ Check cameras on the right, then click  button to remove them from the group.




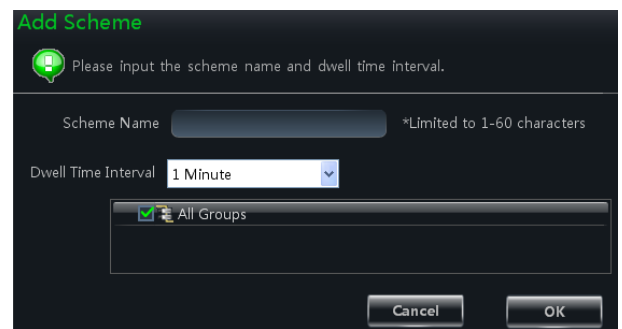 
4.3 Create, Change or Delete Group Dwell Scheme

Scheme is used for dwelling group by group. Therefore, at least one group should be created. Click **“Change or Delete the Group Dwell Scheme”** on the left side of the menu to enter the interface as below.

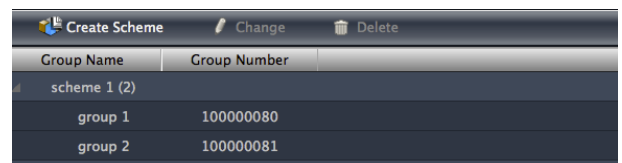



4.3.1 Create Scheme

 
Click  button to create a scheme. The added scheme will be displayed in the scheme list.




 
 
4.3.2 Change and Delete Group Dwell Scheme

Select a scheme in the scheme list, click  button to delete it.

Select a scheme and click  button to enter the interface. You can change the name of scheme and the dwell time interval.

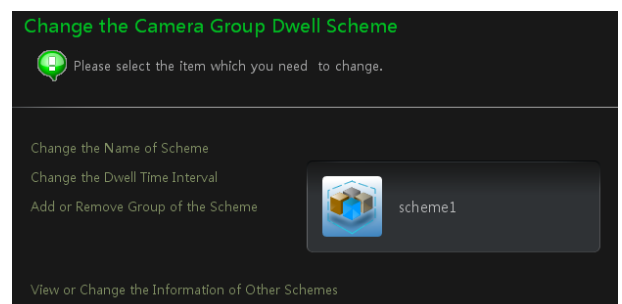

 
Select a scheme and click  button. Then click **“Add or Remove Group of the Scheme”** to enter the interface.

- Check group on the left and click  button to add the selected group to the scheme on the right.
- Check group under scheme on the right and click  button to remove the group.



5 Live Preview

In the interface of control panel, click “Live Preview” to enter the interface.

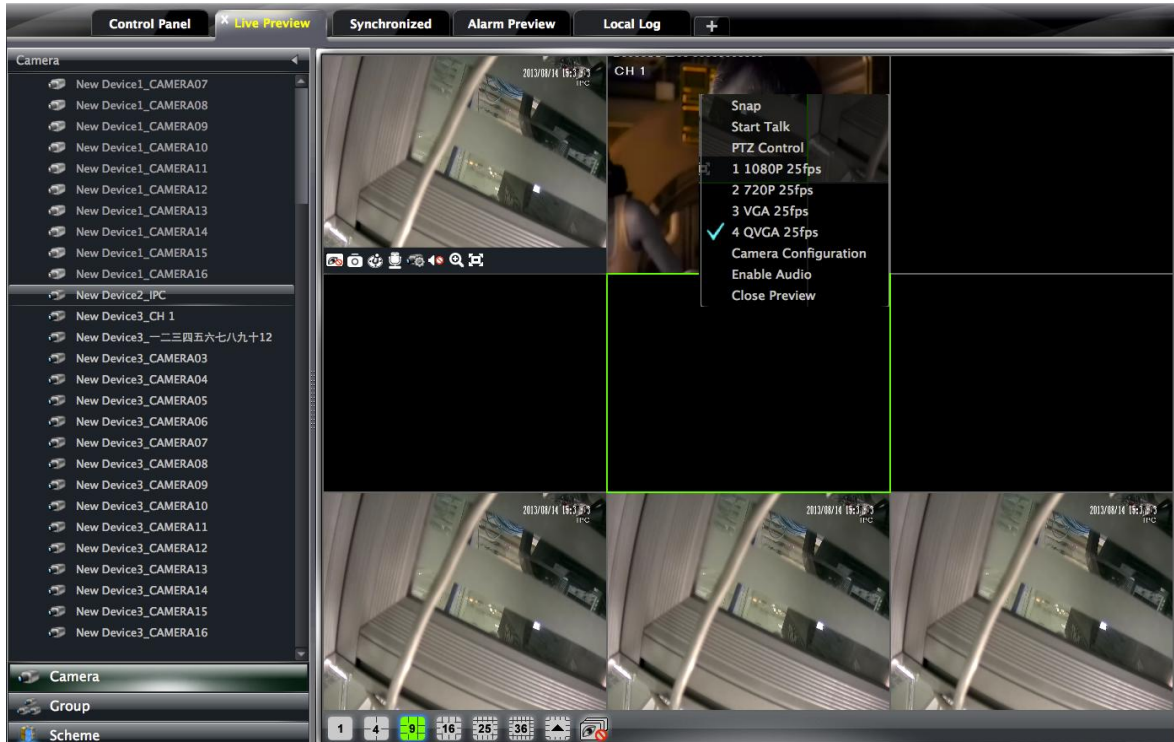

Buttons description of live preview



Toolbar on the display window

Icon	Description	Icon	Description
	Close image		Snap
	Start/stop talk		PTZ control. Clicking the icon will display the control panel of PTZ.
	Open/close audio		Camera configuration
	Fit to window		Zoom in

Right button functions

Menu	Description	Menu	Description
Snap	Snap picture	Camera Configuration	Enter the interface of the area and Camera configuration
Start talk	Start or stop talk	PTZ Control	To display the control panel of PTZ
Stream	Choose stream to view.	Close Preview	Close single channel preview
Enable Audio	Enable or close audio		

5.1 Preview

5.1.1 Monitory Point Preview

To start the live preview, drag the cameras from the list to the right display window or select a window and double-click the camera to display the live image.


You can drag the image to any window at random.

Note: Node expansion rule: After the first time for setting the device and area, you shall obey the following rule to view all tree nodes: when the tree node is more than 64 nodes, the system will unfold the upper node by default.

For example: A (There is camera group AC under A; sub-area a under AC; camera group ac under sub-area a). If the nodes number is more than 64, A will be unfolded and AC will be displayed, but a will not be unfolded and ac will not be displayed. If the node number of A is less than 64, A will be folded and all nodes need to be unfolded manually.

5.1.2 Stop Preview


➤ Close Preview of Channel

Place your mouse on the window to display the menu toolbar, then click  icon to close preview of this channel.


➤ Close Preview by Right-clicking

Choose “*Close Preview*” by right-clicking the display window to close preview of this channel.

➤ Close All Preview



Click  icon on the main menu toolbar to close all the windows.

5.2 Dwell Preview

 
After setting up group or scheme (Please refer to chapter 4 for creating group), enter to the live preview interface and click  button to display the group list or scheme list. The below sections will introduce how to realize group dwell and scheme dwell.

5.2.1 Group Dwell Preview


➤ Start Group Dwell

In the interface of live preview, click  shortcut on the left side to display the groups. Drag a group under scheme to any window ( icon stands for group). The cameras of this group will play one by one on this window at the set time.

NVMS-1200 User Manual

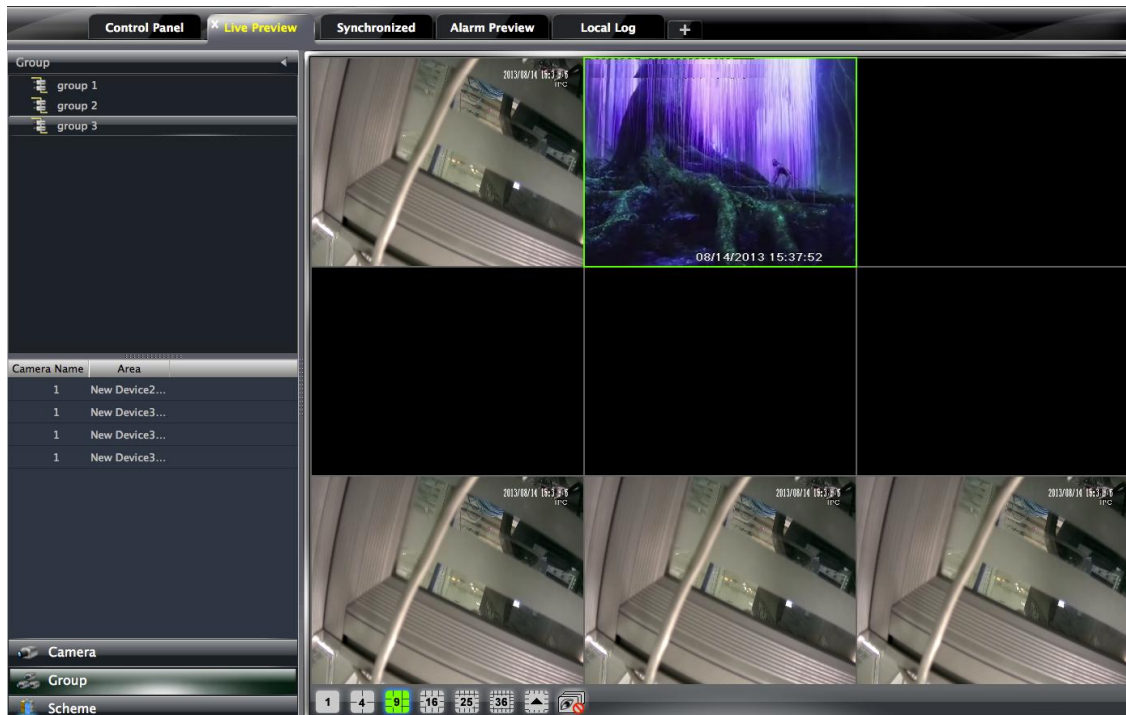




➤ Stop Group Dwell

Right click the display window to select “Close Preview” to close preview of this channel or click  icon on the main menu bar to close all windows for stopping dwell.

5.2.2 Scheme Dwell Preview

➤ Start Scheme Dwell

 
In the interface of live preview, click  shortcut on the left side and then drag a scheme to the right window to dwell ( icon stands for scheme). The screen mode will be distributed automatically according to the number of camera under the group

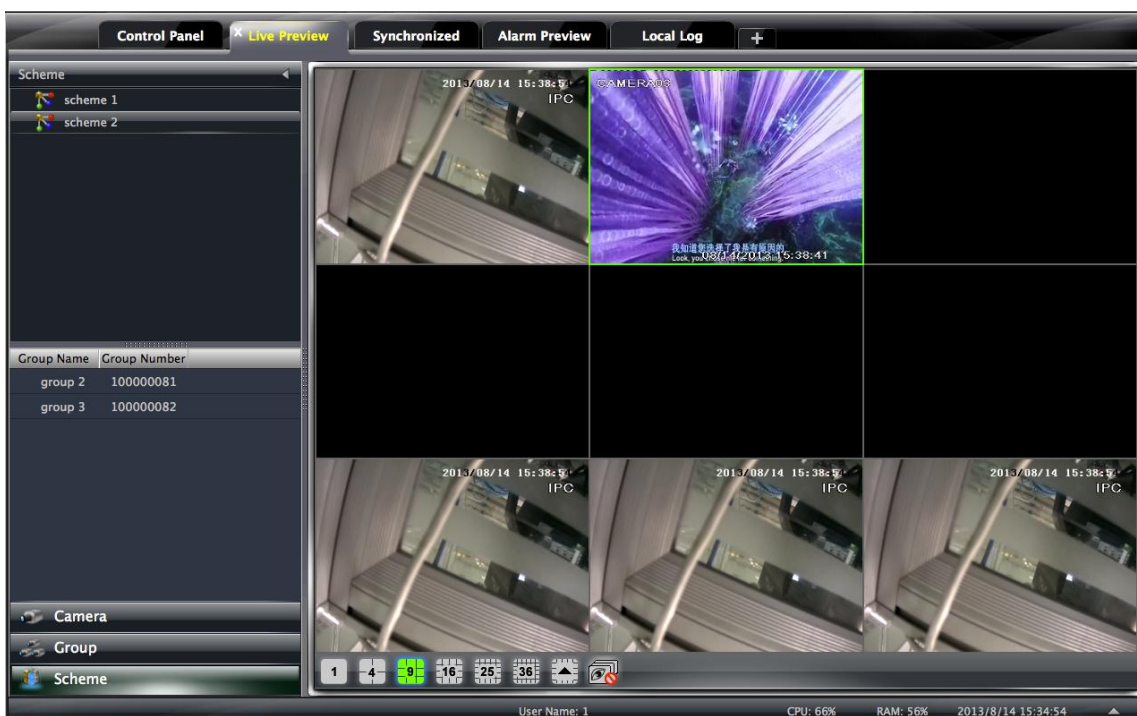

NVMS-1200 User Manual

Note : To achieve dwell between devices, the device should be as a unit when adding groups. Then add all the groups into one scheme to dwell.

➤ Stop Scheme Dwell

Click  icon to close all the windows for stopping scheme dwell.


5.3 Preview Control

➤ Single Channel in Full Screen


Double click the selected window to view in full screen. Double click again to recover the window.

➤ Stream of Live Preview

 
Right click on the display window to choose recording stream. The above stream is main stream (eg: D1 25fps) and the below is sub stream (eg: CIF 6fps).

Modify Device Stream: Click  button on the display window to enter the Area and Camera Management interface. Click **“Image Quality”** under Image Setting to modify device stream. Please refer to chapter 3.3.2 Image Settings for details.



➤ Audio


Right click on the displaying window to choose “Enable Audio” or click  icon to enable audio of this channel.

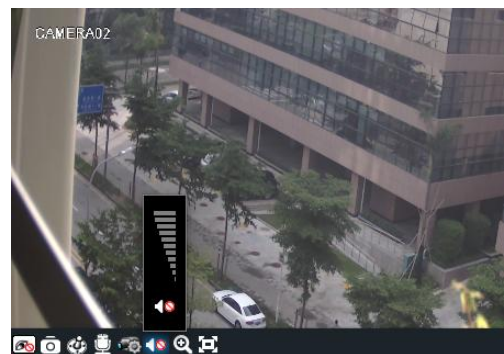Note: Only one audio can be enabled at the same time. If enabling another channel’s audio, the enabled audio will be closed automatically.




➤ Zoom In

 
Click  icon on the toolbar in the displaying window to zoom in the image; click  icon to recover the image.

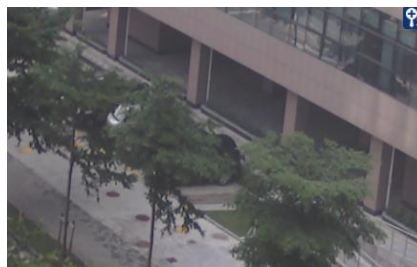

5.4 Snap

5.4.1 Snap

 Click  button on the toolbar of the selected channel or right click to choose **“Snap”** to capture the pictures.

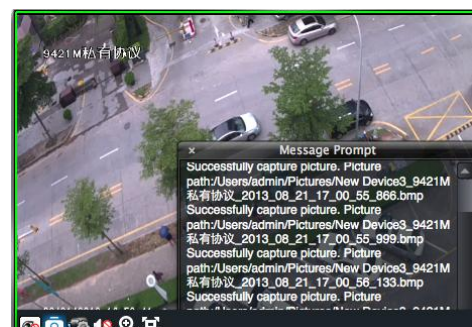

NVMS-1200 User Manual

After snapping pictures, a message prompt box will pop up to remind you the pictures are captured successfully and where the pictures are stored.

Note: Capturing pictures can be realized only in live preview or playback.

5.4.2 Snap Number

 
In the interface of control panel, click **“Set Snap Default Number”** under **Basic** to configure the number you want to capture every time.

5.4.3 Snap Path

In the control panel, click **“Basic”** to enter the interface. Click **“Path of snap file”** to select a folder to save the captured pictures.

5.5 Multi-screen to Preview

In the interface of live preview, click **+** button to plus a tab of live preview. Drag any tab of live preview to pop up an independent live preview interface as below. Multi-screen to display can be realized by dragging the independent interface to other screen (graphics card should support multi-screen output at the same time).

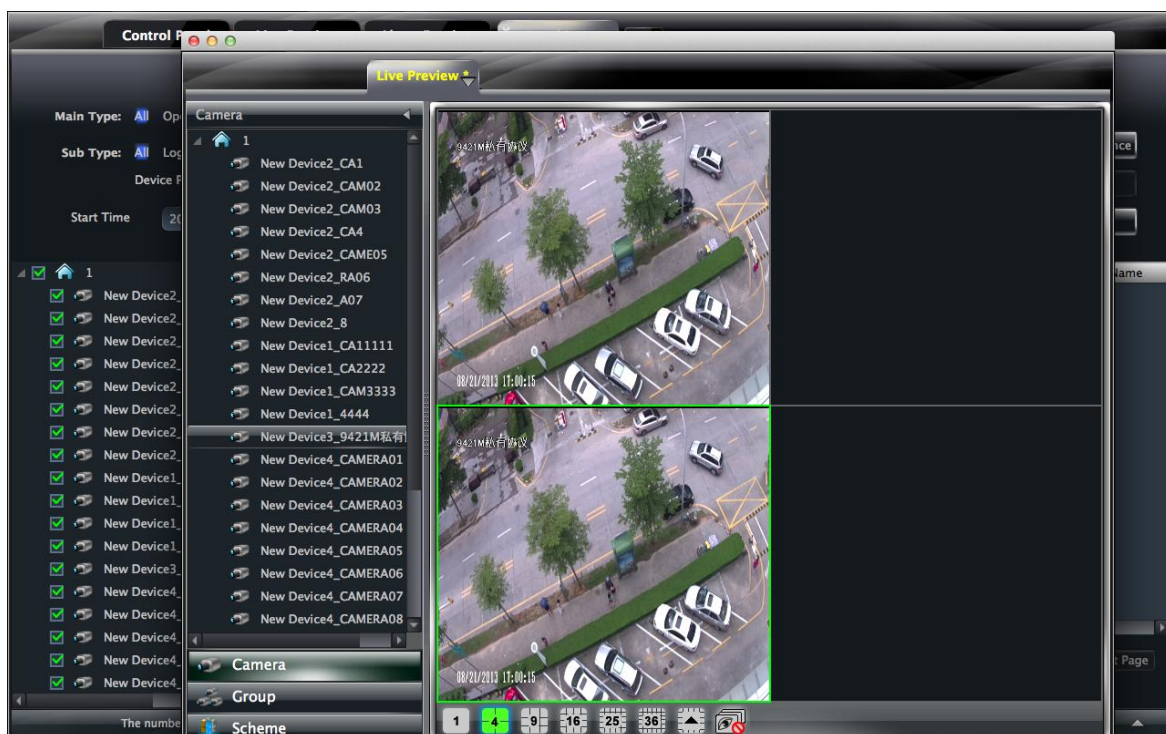

Clicking the **▼** button of the live preview interface to choose **“Tab View”** can embed this tab in main interface . .


Note : 1. 20 live preview tabs can be added.

2. Live preview interface can be displayed on multiple screens.





5.6 Talk and Broadcast

 
5.6.1 Talk

Click  button on display window or right click to pop up a menu bar. Choose “Start Talk” to enable bidirectional audio.

Note: Since NVMS-1200 only allow opening one device’s talk at the same time, the system will stop talk with the current device for enabling new talk with another device which is launching talk.


5.6.2 Broadcast

- ① Click “**System**” on the menu bar of software at the upper right; choose “**Broadcast**” to enter the interface.
- ② Click  button to pop up a window; then check the devices you want to broadcast, click **OK** button to save the setting.
- ③ Click  button to stop broadcast.

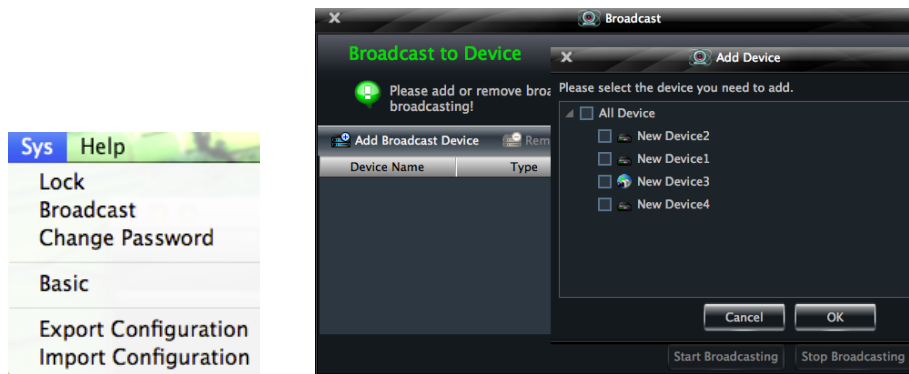


5.7 PTZ Control



5.7.1 Parameter Configuration of PTZ

Please confirm the parameter of PTZ has been configured correctly before operating PTZ. Click  icon in display window or “*Change Camera Setting*” under “*Device*” to enter the interface. Click “*PTZ Setting*” to enable PTZ and setup protocol, baud rate and address of PTZ.

Note: Here the protocol, baud rate and address of PTZ must be consistent with the PTZ decoder.




5.7.2 PTZ control

Return to the live preview interface after configuring parameter of PTZ; select the channel and click  icon or right click to choose “*PTZ Control*” to open the control panel of PTZ.

- Click the direction buttons to control its rotational direction; drag the slider to control its speed.
- Click  and  buttons to adjust focus, iris and zoom.



 
NVMS-1200 User Manual

- Select a preset point and click  to operate this preset point or double click the preset point to operate it.
- Click **【Cruise】** button to list the cruises. Select a cruise and click  button to cruise; click  button to stop cruising.

PTZ can also support track, auto scan, wiper and light function.

6 Playback Management

In the interface of control panel, click “**Playback**” to enter the interface. You can play back the record files saved in the HDD of the device. You can play the record of multiple channels meanwhile. Additionally, all those records are played at the same time point automatically.

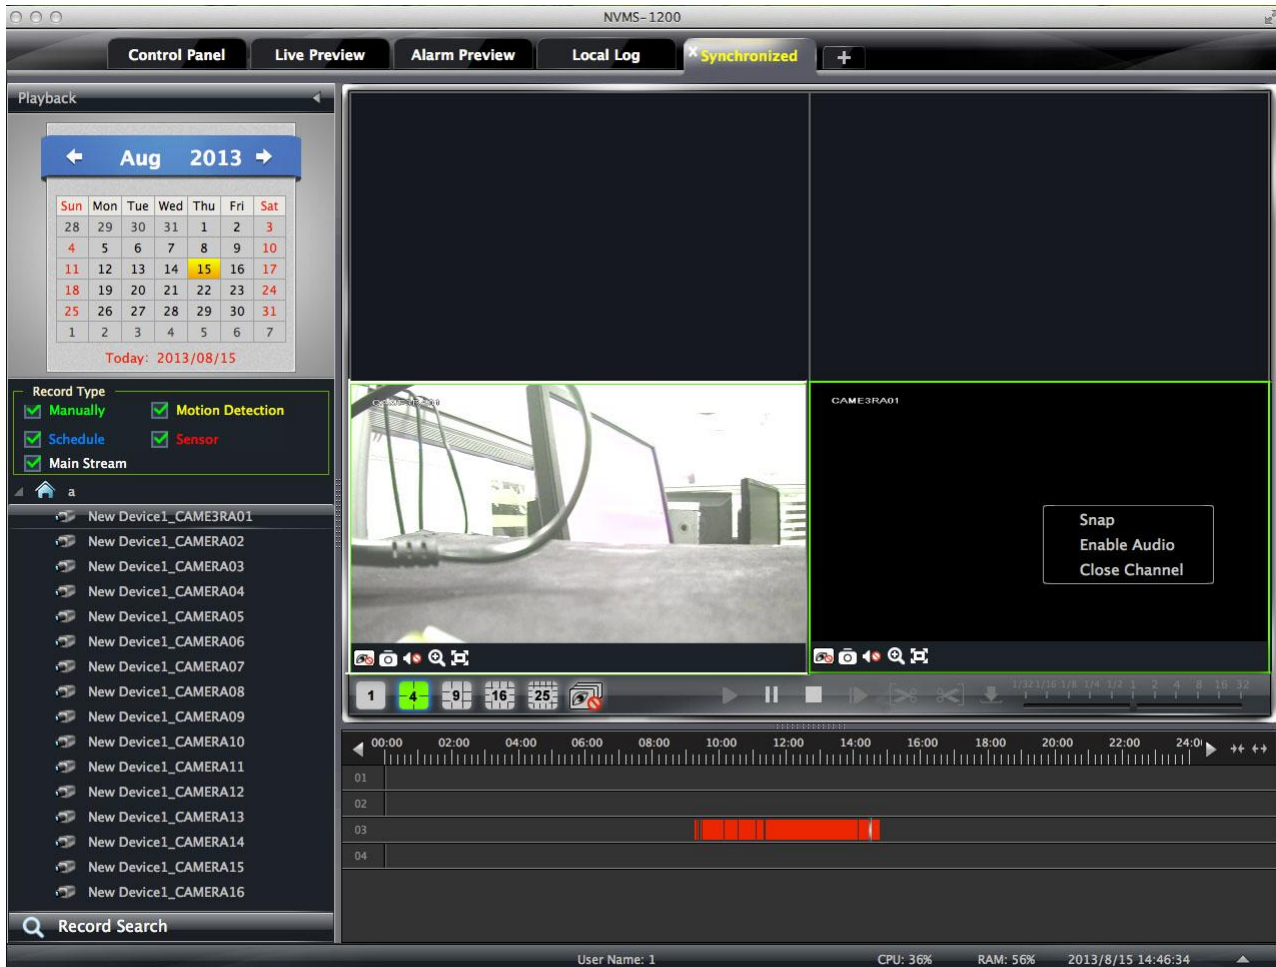






Buttons Description

Icon	Description
	Screen mode. 1,4,9,16,25 channels are optional
	Close playback of all channels
	Play
	Pause
	Stop
	Playback by single frame. When playback, click button firstly and then click this button to play frame by frame.
	Clip
	Backup
	Playback speed bar


NVMS-1200 User Manual

Toolbar on Playback Window

Icon	Description	Icon	Description
	Close playback		Snap
	Open/close audio		Zoom in
	Fit to window		



Right button functions


Menu	Description	Menu	Description
Snap	Snap picture	Enable Audio	Enable or close audio
Close Channel	Close single channel preview		



In the playback interface, select the screen, date and channel and then click  button to search the record file. After the record files are searched, click  button to playback.

In the timeline, green bar stands for manual record data; yellow bar stands for motion record data; blue bar stands for schedule record data; red bar stands for sensor record data.

 6.1.1 Playback by Setting Time

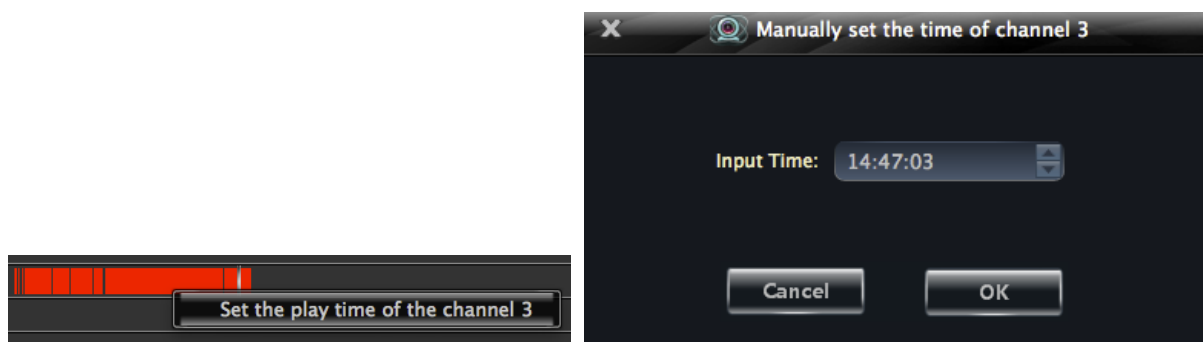
Right click the color bar to select *“Set the Play Time of the Channel X”*, and then a dialog window pops up. Input time manually or click   button to select time. The system will play the video from the time you set.



Note:  and  buttons on the timeline are used to expand and narrow down the time bar, so you can choose a more accurate playback time.

 
What's more, you may also change playback speed by dragging  bar.

6.2 Snap When Playback

Click  button on the playing window to capture pictures. A message prompt will pop up after snapping.


6.3 Download Record


Click “Backup Record” in the control panel interface. This will bring up a window as shown below:

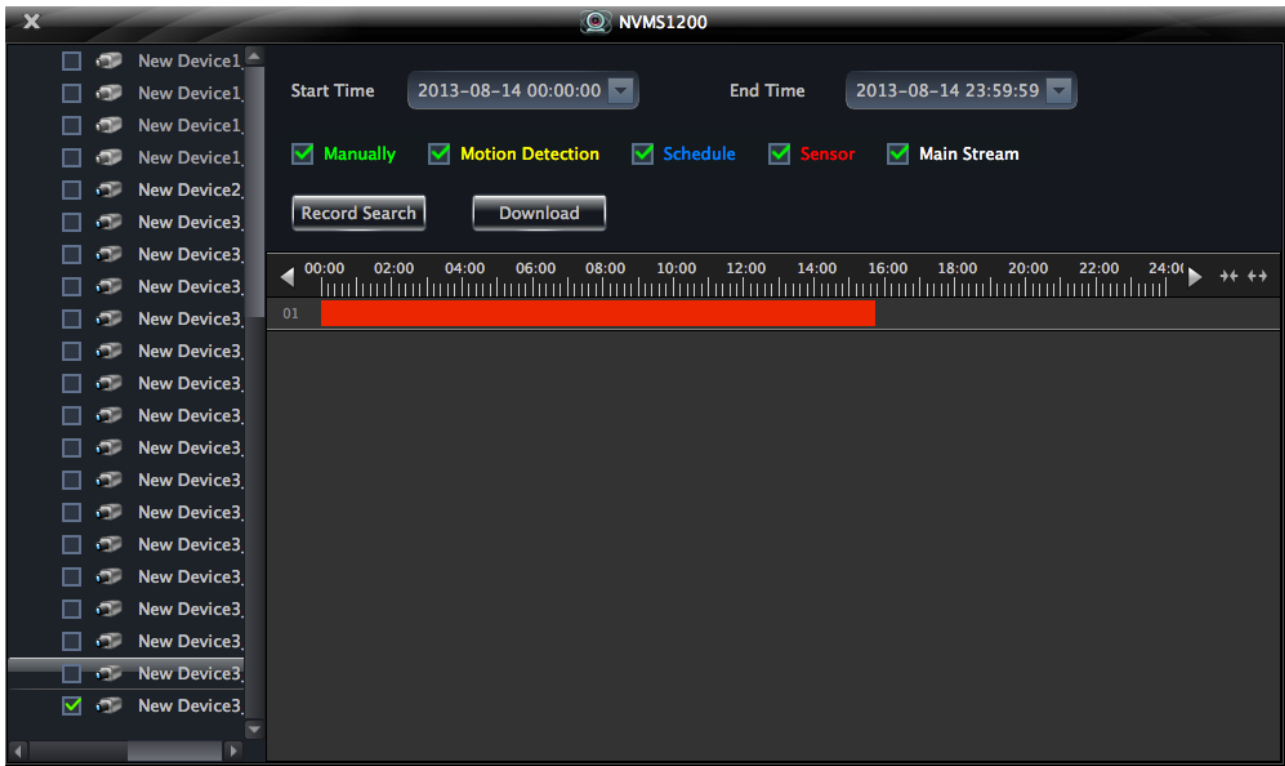

Select record channel, start time and end time, checkmark event type and then click **【Record Search】** button to search record information. After the information is searched, a backup information window will pop up by clicking **【Download】** button. Click **【Browse】** button to choose save path. Then click **【OK】** button to download record.

6.4 View the Progress of Downloading

 
When starting downloading, you can view the progress of downloading and stop downloading manually by putting the cursor on the lower right corner (under  button).

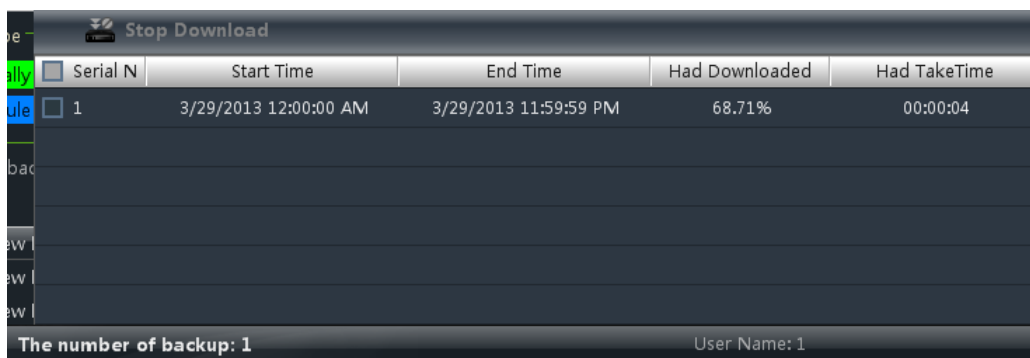

7 Alarm Management

 
 
7.1 Sensor Alarm


In the control panel, click “**Alarm Management**” to enter the interface.

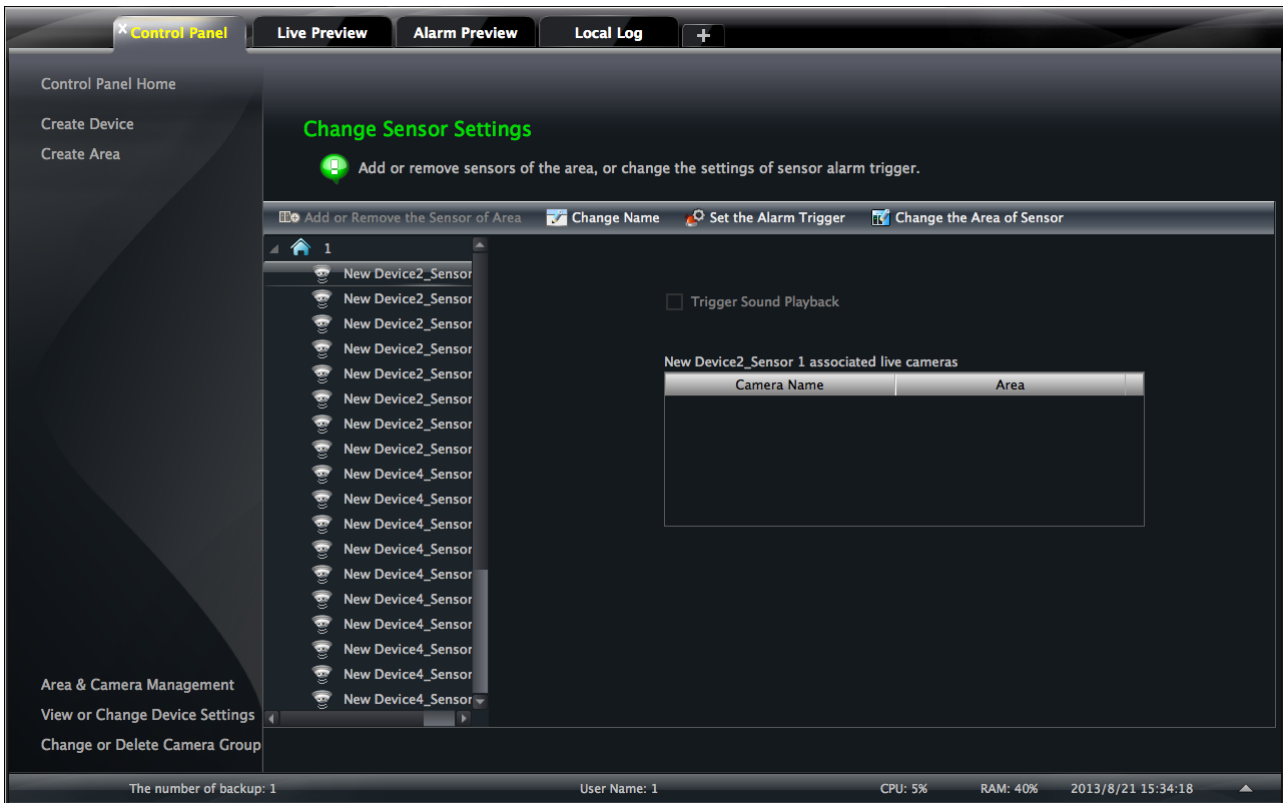



➤ Add or Remove Sensor of the Area

In the interface of Alarm Management, choose an area, click  button to enter the interface.

 - ① Check the sensor under the area on the right and click  button to move out the sensor.
- ② Check the sensor on the left and click  button to add sensor.

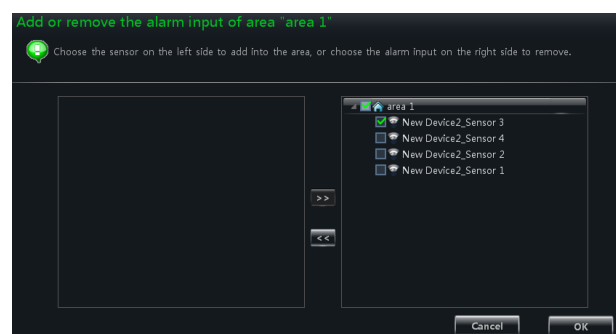


➤ Rename or Change Area

 In the interface of Alarm Management, choose a sensor and click  button to change its name; Click  button to change the area of sensor.


➤ Alarm Trigger Setup

In the interface of Alarm Management, choose a sensor and click “Set Alarm Trigger” button to enter the interface.

 If checking “*Trigger Alarm Playback*”, there will be a sound like “beep” on an alarm.

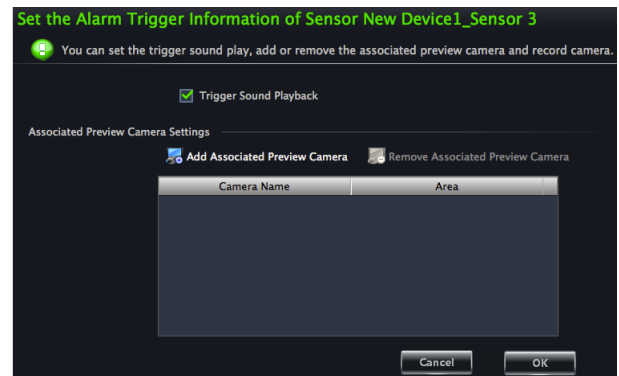


◆ Add Associated Preview Camera

 Click  to pop up a window; check cameras and click **【OK】** button to save the setting.

When sensor alarm is triggered, the alarm preview and e-map preview will pop up automatically.

 Select the added camera, click “Remove Associated Preview Camera” to remove the camera.

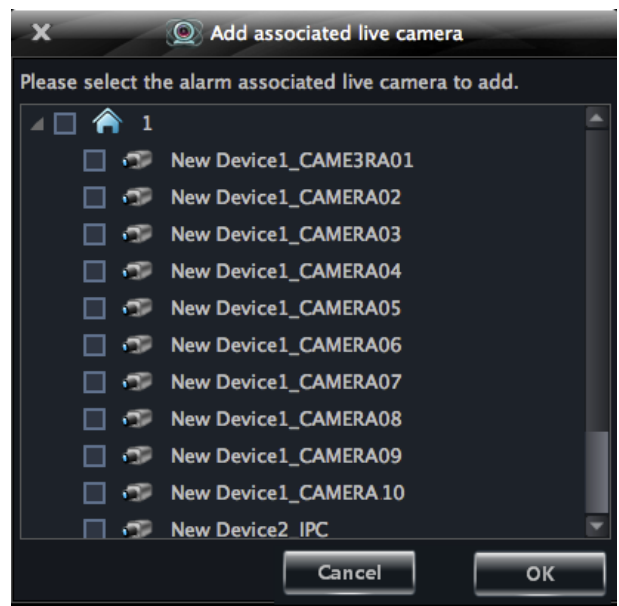

7.2 Motion Detection Alarm

In the control panel, click “*Change Camera Settings*” under Device.

- Select a camera and click “*Area and Sensitivity*” to enter the interface as right. You can adjust the detection sensitivity and setup the motion area.
- Click “*Set the Motion Alarm*” to enter the interface. Enable motion detection alarm and set the alarm trigger. Please refer to section 3.3.2 for details.

7.3 Video Loss Alarm

In the control panel, click “*Area & Camera Management*” under Device.

Click “*Video Loss*” to enter the interface. The steps of configuring video loss are same with the device settings, please refer to the video loss chapter of device user manual.

Choose a camera and click “*Video Loss of System*” to enter the interface. Please refer to section 3.3.2 for details.

7.4 Alarm Preview

The interface of alarm preview will automatically pop up if the relevant alarm page and alarm preview have been already configured.

7.4.1 Alarm Preview Configuration

■ **Motion Detection Alarm:** In the control panel, click “*Change Camera Settings*” under *Device* to enter the

NVMS-1200 User Manual

 
interface. Select a camera, and then click “*System trigger*” shortcut under Motion Detection Alarm Settings to appear a window; click **【Trigger the Big Screen】** button under system linkage to select channel.

■ **Video Loss Alarm:** Click “*Video Loss of System*” to enter the interface; click **【Trigger the Big Screen】** button under System Linkage to select channel.

■ **Sensor Alarm:** In the control panel, click “*Alarm Management*” to enter the interface. Click “Set the Alarm Trigger” button to add the associated preview cameras.


In the control panel, click “*Change Alarm Preview Settings*” under Live Preview to pop up the window

- ① Alarm preview will pop up automatically on an alarm if checking “Automatic Pop-up Alarm Page”.
- ② Choose the number of screen.

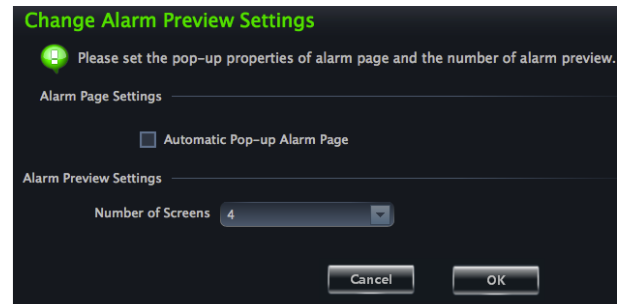


7.4.2 Alarm Preview

 After configuring the alarm, the alarm preview will automatically pop up if the alarm of selected channels is triggered. The default pop-up window of system is independent interface.

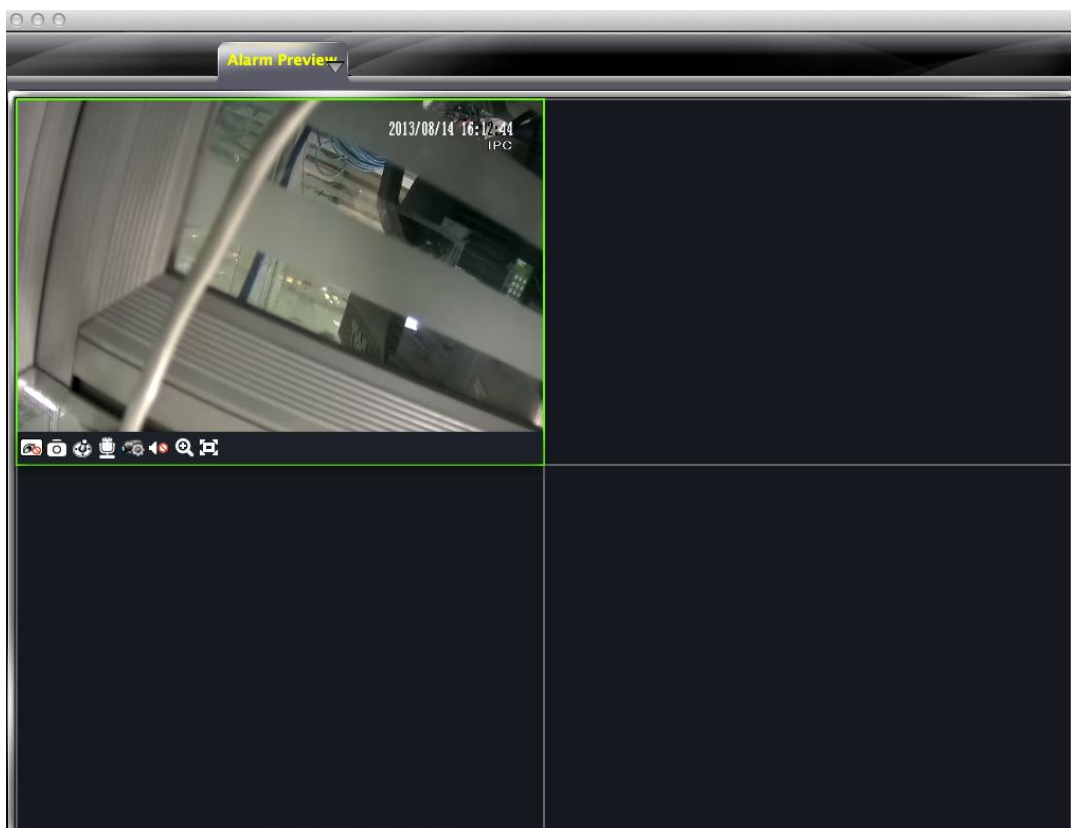

8 Local Log

 In the interface of control panel, click “Local Log” to enter the interface.

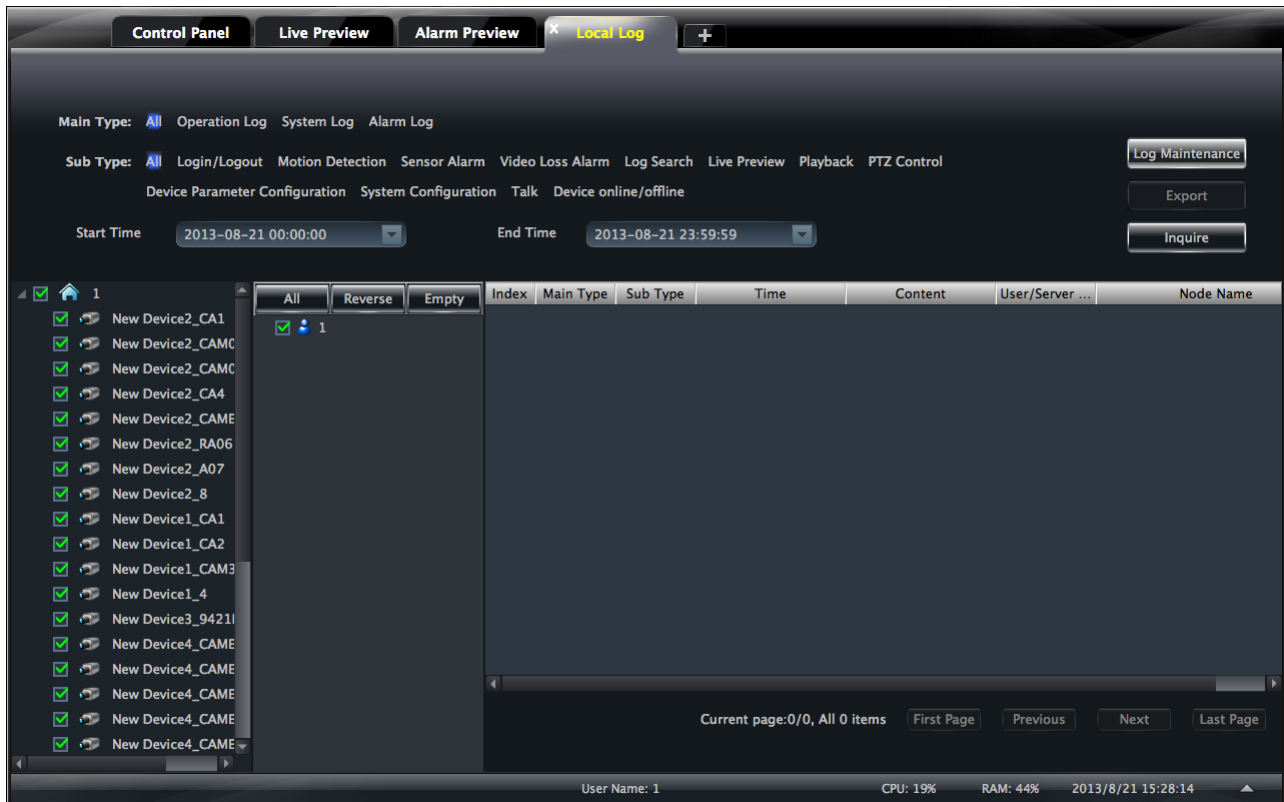


8.1 Search log

Choose main type, sub type, set the start time and end time and then click **【Inquire】** button to search the relevant log information. click **【First page】** **【Previous】** **【Next】** **【Last page】** to view the information on different pages.

8.2 Log Maintenance

 In the log interface, click **Log Maintenance** button to pop up a dialog window. You can save the information of log for a certain time in this interface.

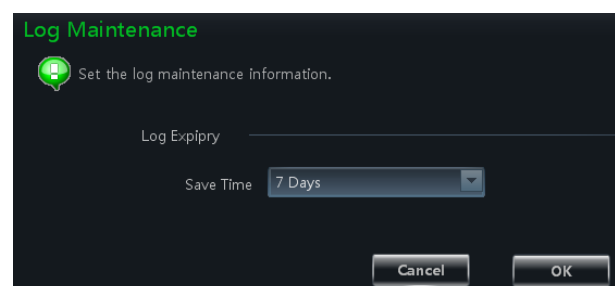

8.3 Export

In the log interface, click **Export** button and then choose a storage path to export the log information.

9 User Management

In the interface of control panel, click “User Management” to enter the interface.

There is only one super user registered by you when logging in the system for the first time. You can add several users and set right for them through the function of “Set Account Right”.




9.1 Create a Resource with the Default Permission

In the above interface, clicking “*Create a Resource with the Default Permission*” means that permission of new resources will be given to all the users if you are going to create new resources.

9.2 Create, Change and Delete Users

➤ Create Account

In the interface of User Management, click  Create Account to pop up a dialog window. Input account name and password. Choose account type and default right. You can bind account by e-mail or telephone and add description if you wish.


Note: • Two types of user: administrator and operator. administrator enjoys all the system permissions except account and permission management.

Operator only enjoy the permissions of broadcast, searching and exporting log.


NVMS-1200 User Manual

 
- If you have checked “Default Permission” under initial permission when creating new account, all the resource permissions and system permissions will be added for the user.

➤ Change Account


In the interface of User Management, select a user and click  button to enter the interface. You can change account name, password, e-mail address, etc.


➤ Delete Account

In the interface of user management, select a user and click  button to delete it.

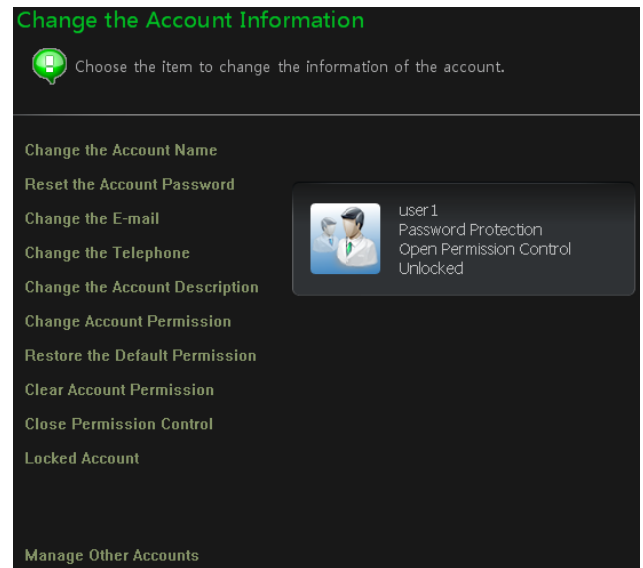


9.3 Account Right Configuration

 
In the interface of User Management, select a user and then click  to enter the interface.

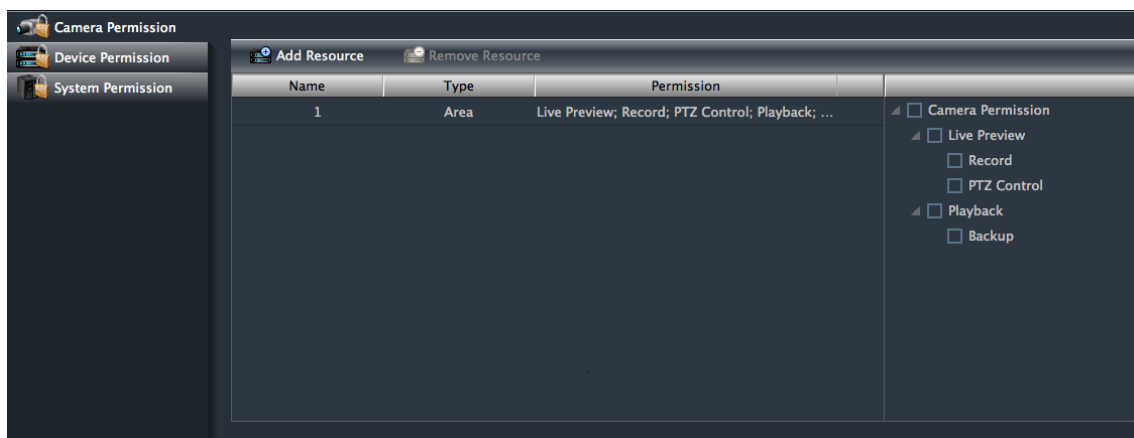

➤ Camera Permission


In the interface of Camera Permission, click  button to add resources and check camera permissions on the right.

 You can add different permissions for different users.

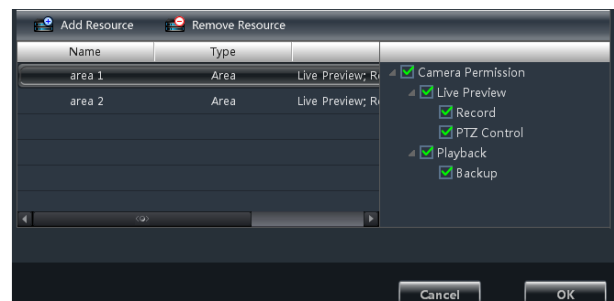

➤ Device Permission

 Click “*Device Permission*” to enter the interface. Select the right on the right hand you want to enjoy.

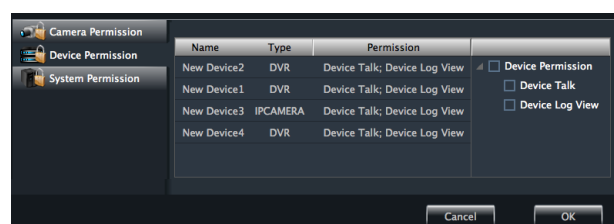

NVMS-1200 User Manual


➤ System Permission

 
Click “*System Permission*” to enter the interface, you can set the right of broadcast, searching log information and exporting it for the user you selected.

➤ Restore Default Permission

In the interface of account right management, select a user and click  to restore default permission of this user.


➤ Clear Permission

In the interface of account right management, select a user and click  to clear this user’s permission.

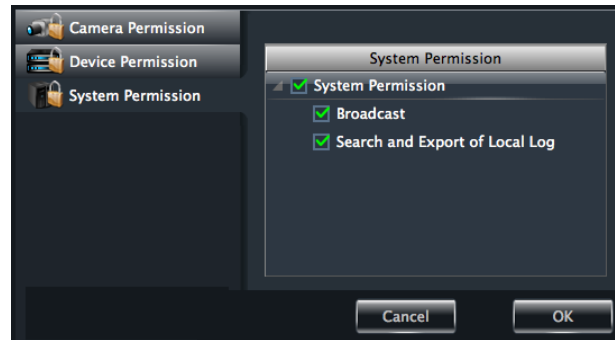

10 Basic

 In the interface of control panel, click “**Basic**” to enter the interface. Here, you can set up the path of backup and snap file, as well as backup and restore.

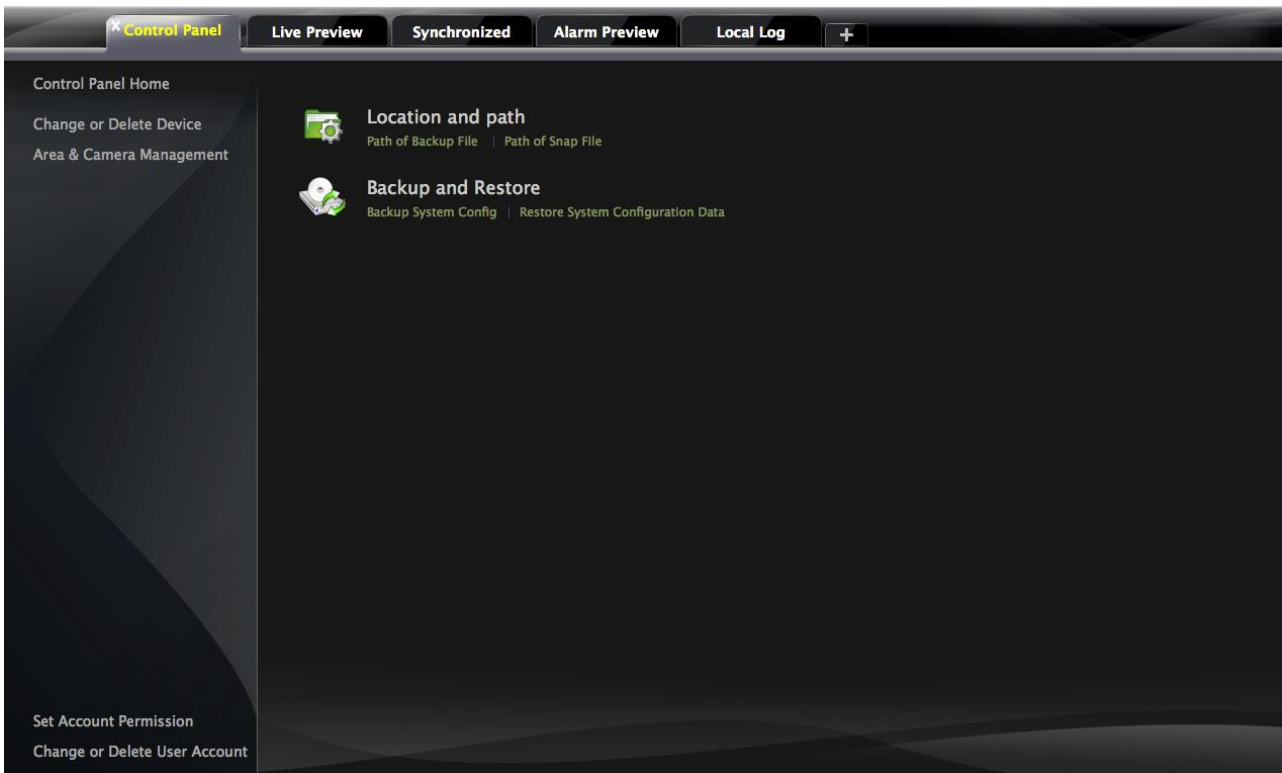

10.1 Location and Path

Path of backup file setup: Click the shortcut menu in the above interface to set the backup path.

Path of snap file setup: Click the shortcut menu in the above interface to set the snap path.

10.2 Backup and Restore

When upgrading the software to a new version, you should firstly export the data of the previous version and then import to the new version so that repeated addition and settings could be avoided.

10.2.1 Backup System Configuration data

In the interface of Basic Configuration, click “*Backup System Configuration Data*” to export the configuration data.


10.2.2 Restore System Configuration Data

In the interface of Basic Configuration, click “*Restore System Configuration Data*” to import the configuration data.

10.3 Manually Trigger the Alarm Output

In the control panel, click “*Manual Alarm Output*” under Basic Configuration to enter the interface.

Check “Enable”; select a corresponding device and alarm output; then edit a name for it.

Then an icon  will appear at the right bottom of the software. Clicking this icon will trigger the alarm of selected device.

